

**My AVerVision document camera is out of focus. How can I get a focal point again?
(For AVerVision 130/150/300i/300p)**

- 1) Please detach the LED module from the camera head
- 2) Move the camera head to the position where facing forward to you



- 3) Hold the focus ring, and turn the lens to clockwise direction until you hear a "click". Now, when you turn the lens, the focus ring will be also turned accordingly. This indicates that the focus ring re-attaches to the lens.



DISCLAIMER

No warranty or representation, either expressed or implied, is made with respect to the contents of this documentation, its quality, performance merchantability, or fitness for a particular purpose. Information presented in this documentation has been careful checked for reliability; however, no responsibility is assumed for inaccuracies. The information contained in this documentation is subject to change without notice.